



Accordion Shutter

Technical Catalog



TABLE OF CONTENTS

Wall Track	5
Floor & Ceiling Track	8
Blades & Enclosures	11
Starters & Angles	14
Accordion Parts & Accessories	17
Accordion Shutter Breakdowns	22
Pre-Cut Measurements & Information	25
Accordion Height Charts	28
Accordion Cut Calculations	31
Accordion Width Charts	35
Accordion Lock Replacement	42

Disclaimer

The dimensions and thickness of aluminum profiles shown in this manual are theoretical and may vary according to the tolerance provided by American Construction Standards. Cutting lists shown in this manual do not take into account these possible variations. We, therefore, recommend carefully checking aluminum profile dimensions, as well as, the cutting accuracy of all machinery.

The system described in this manual has been designed and tested as a whole. The use of the Croci brand is permitted only when original Croci components are used (sections, accessories, and gaskets) and only when the technical specifications given in this manual are complied with. In the event that any component of the system is not an original Croci component, the use of the Croci brand is not authorized.

The product shall be used in accordance with the specifications, regulations, and laws in force in the country where the product itself is used. Croci waives all responsibility resulting from non-compliance with the above-listed instructions.

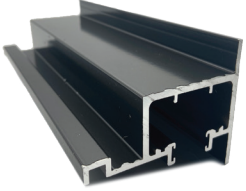
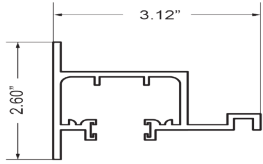
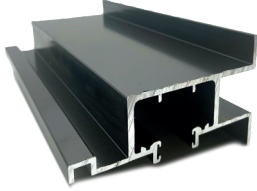
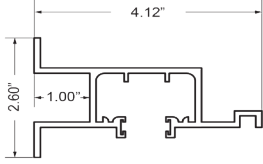
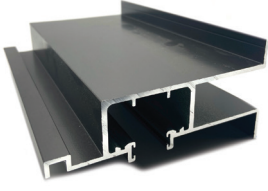
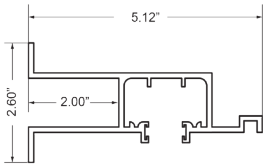
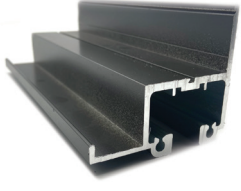
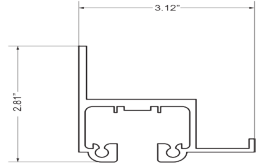
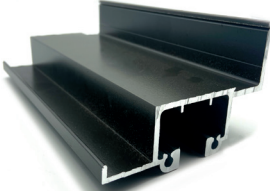
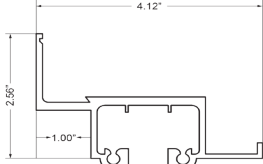
Any details provided in this manual representing frames back to the structure are merely shown as an indication to assist designers and manufacturers.

Wall Track

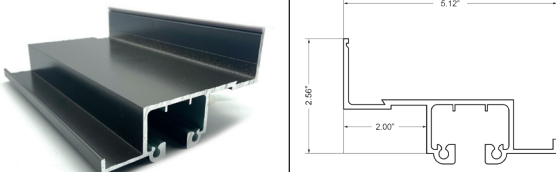
Available In:



Systems

Code/Reference	Dimensions	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
WALTR04 		Double leg flush (zero buildout) wall track		●	●	●	1 Piece 20ft
WALTR1" 		Double leg 1" buildout wall track		●	●	●	1 Piece 20ft
WALTR2" 		Double leg 2" buildout wall track		●	●	●	1 Piece 20ft
WALTRSGLFM 		Single leg flush (zero buildout) wall track	●	●	●	●	1 Piece 20ft
WALTRSGLFM1" 		Single leg 1" buildout flush (zero buildout) wall track	●	●	●	●	1 Piece 20ft

Cream 47

Code/Reference	Dimensions	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
WALTRSGLFM2"		Single leg 2" buildout flush (zero buildout) wall track					1 Piece 20ft

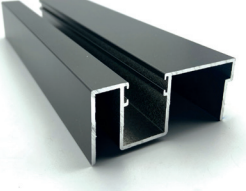
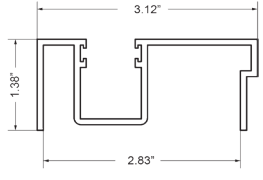
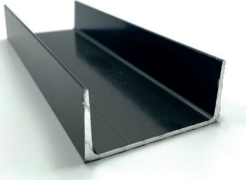
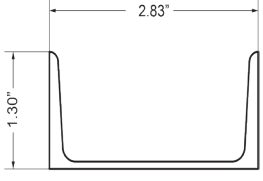
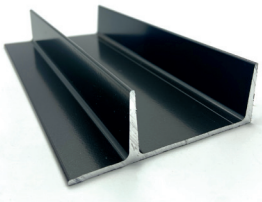
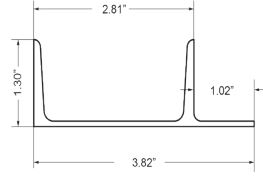
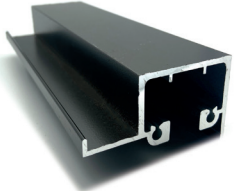
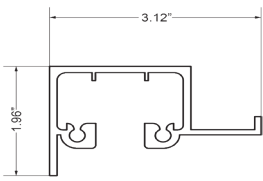
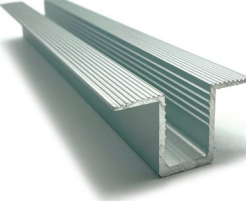
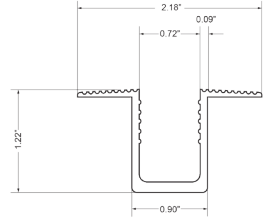
Floor & Ceiling Track



Available In:



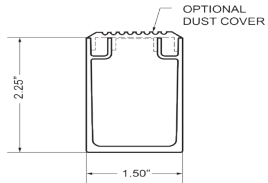
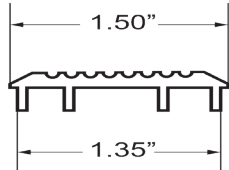
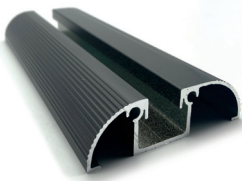
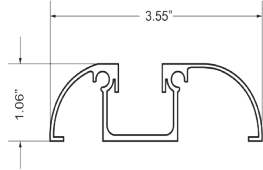
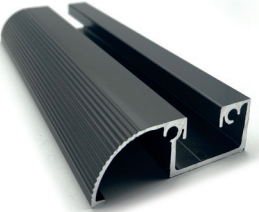
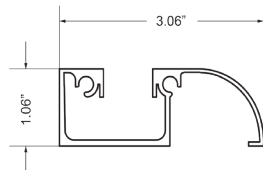
Systems

Code/Reference	Dimensions	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
SILL04 		Top portion of two piece bottom track, adjustable		●	●	●	1 Piece 20ft
SILLAD04 		Bottom portion of two piece bottom track, adjustable		●	●	●	1 Piece 20ft
SILLADW/LO4 		Bottom portion of two piece bottom track with leg, adjustable		●	●	●	1 Piece 20ft
CEILFM 		Flush mount (zero buildout) ceiling track.	●	●	●	●	1 Piece 20ft
FLRTRACKSM 		Recessed small floor track cover Only available in natural aluminum anodized finish		●	●	●	1 Piece 20ft

Available In:



Systems

Code/Reference	Dimensions	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
FLRTRACKLG 		Recessed large floor track		●	●	●	1 Piece 20ft
FLRTRACKCVR 		Recessed small floor track cover		●	●	●	1 Piece 20ft
WALKFM 		Walkover track	●	●	●	●	1 Piece 20ft
THRESH 		Flush mount (zero buildout) threshold track	●	●	●	●	1 Piece 20ft

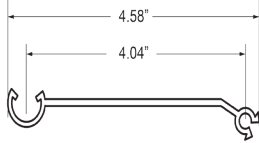
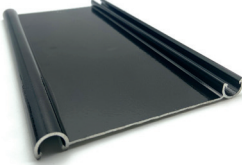
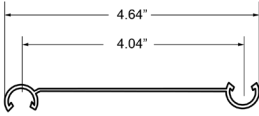
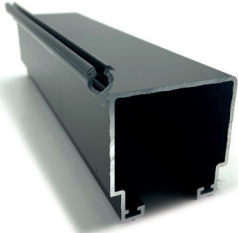
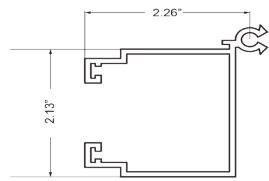
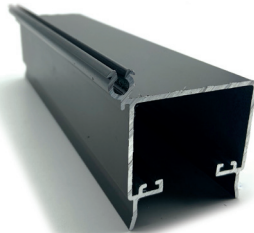
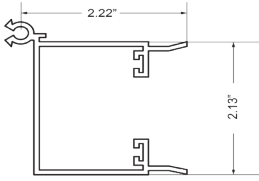
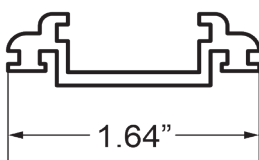
Blades & Closures



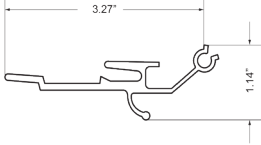
Available In:



Systems

Code/Reference	Dimensions	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
BLO4RE 		Accordion blade	☒	☒	☒	☒	10 pieces (1 BDL) 18ft 16.5ft 14.5ft
BLFEMALE04 		Female to female floating blade for floating stacks	☒	☒	☒	☒	1 piece 18ft
MALE04 		Male closure for mortise centermate assembly	☒	☒	☒		1 piece 18ft
FEMALE04 		Female closure for mortise centermate assembly	☒	☒	☒		1 piece 18ft
CENTIN 		Centermate insert for male and female mortise closure	☒	☒	☒		1 piece 18ft

Cream 47

Code/Reference	Dimensions	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
BLLOCK04 		Blade lock for flat blade lock assembly	●	●		●	1 piece 18ft

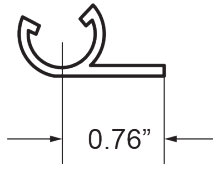
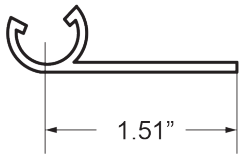
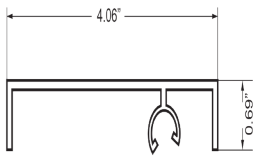
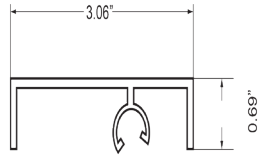
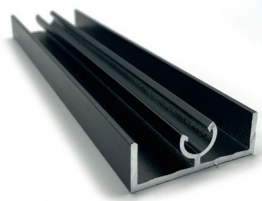
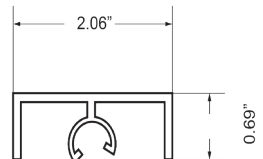
Starters & Angles



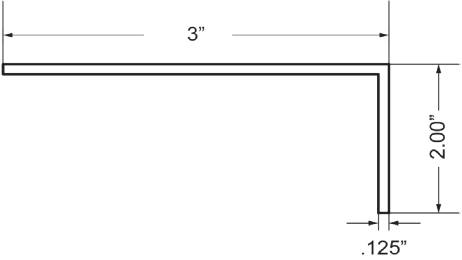
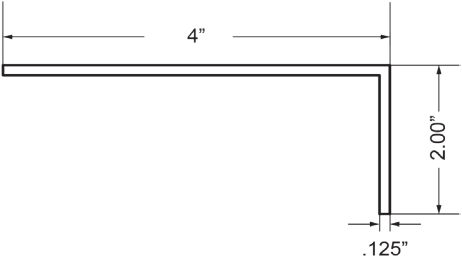
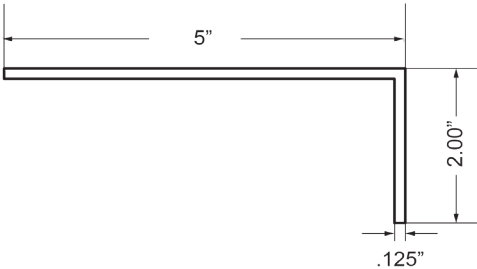
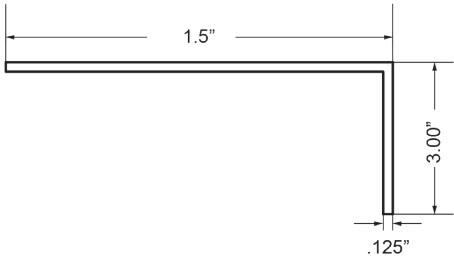
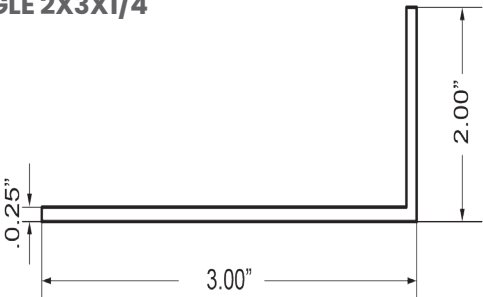
Available In:



Systems

Code/Reference	Dimensions	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
SMST04 		Small starter strip		●	●	●	1 piece 18ft
STO4 		Large starter strip		●	●	●	1 piece 18ft
STFM2" 		2" starter strip for Flush Mount System	●		●	●	1 piece 20ft
STFM1" 		1" starter strip for Flush Mount System	●		●	●	1 piece 20ft
STFM 		Starter strip for Flush Mount System	●		●	●	1 piece 20ft

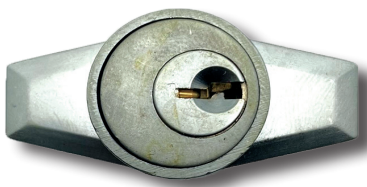
Systems

Code/Reference	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
ANGLE 2x3x1/8 	2" x 3" x 1/8" Angle		●	●	●	1 piece 20ft
ANGLE 2x4x1/8 	2" x 4" x 1/8" Angle		●	●	●	1 piece 20ft
ANGLE 2x5x1/8 	2" x 5" x 1/8" Angle		●	●	●	1 piece 20ft
ANGLE 1.5x3x1/8 	3" x 1.5" x 1/8" Angle		●	●	●	1 piece 20ft
ANGLE 2X3X1/4 	2" x 3" x 1/4" Angle		●	●	●	1 piece 20ft

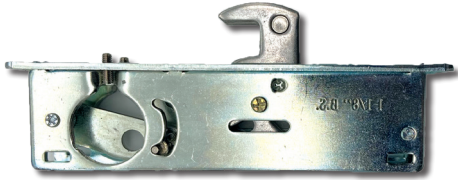
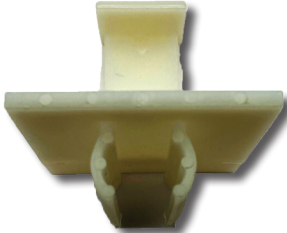
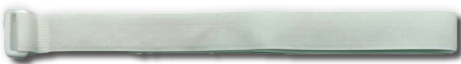
Accordion Parts & Accessories



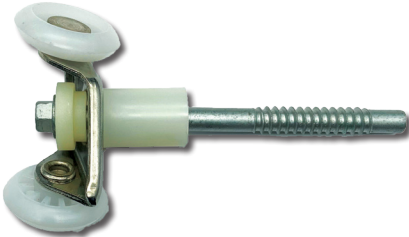
Systems

Code/Reference	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
KEY04 	Key for mortise center-mate assembly	●	●	●		1
THMB04 	Thumb turn for mortise centermate assembly	●	●	●		1
THMBLK04 	Thumb turn for flat blade lock assembly	●	●		●	1
PUSHKEY04 	Key lock for flat blade lock assembly	●	●		●	1
FACEPLATE 	Faceplate for mortise centermate assembly	●	●	●		1

Systems

Code/Reference	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
HK04 	Hook bolt for mortise centermate assembly	●	●	●		1
ACCTRACKCLIP 	Track clip	●	●	●	●	1
TIEBACK 	Holdback clip for mortise centermate assembly Available in white and dark bronze	●	●	●		1
FLATBAR 	Flat bar for mortise centermate assembly	●	●	●		1
VELCRO 	6.8 Velcro straps	●	●	●	●	1

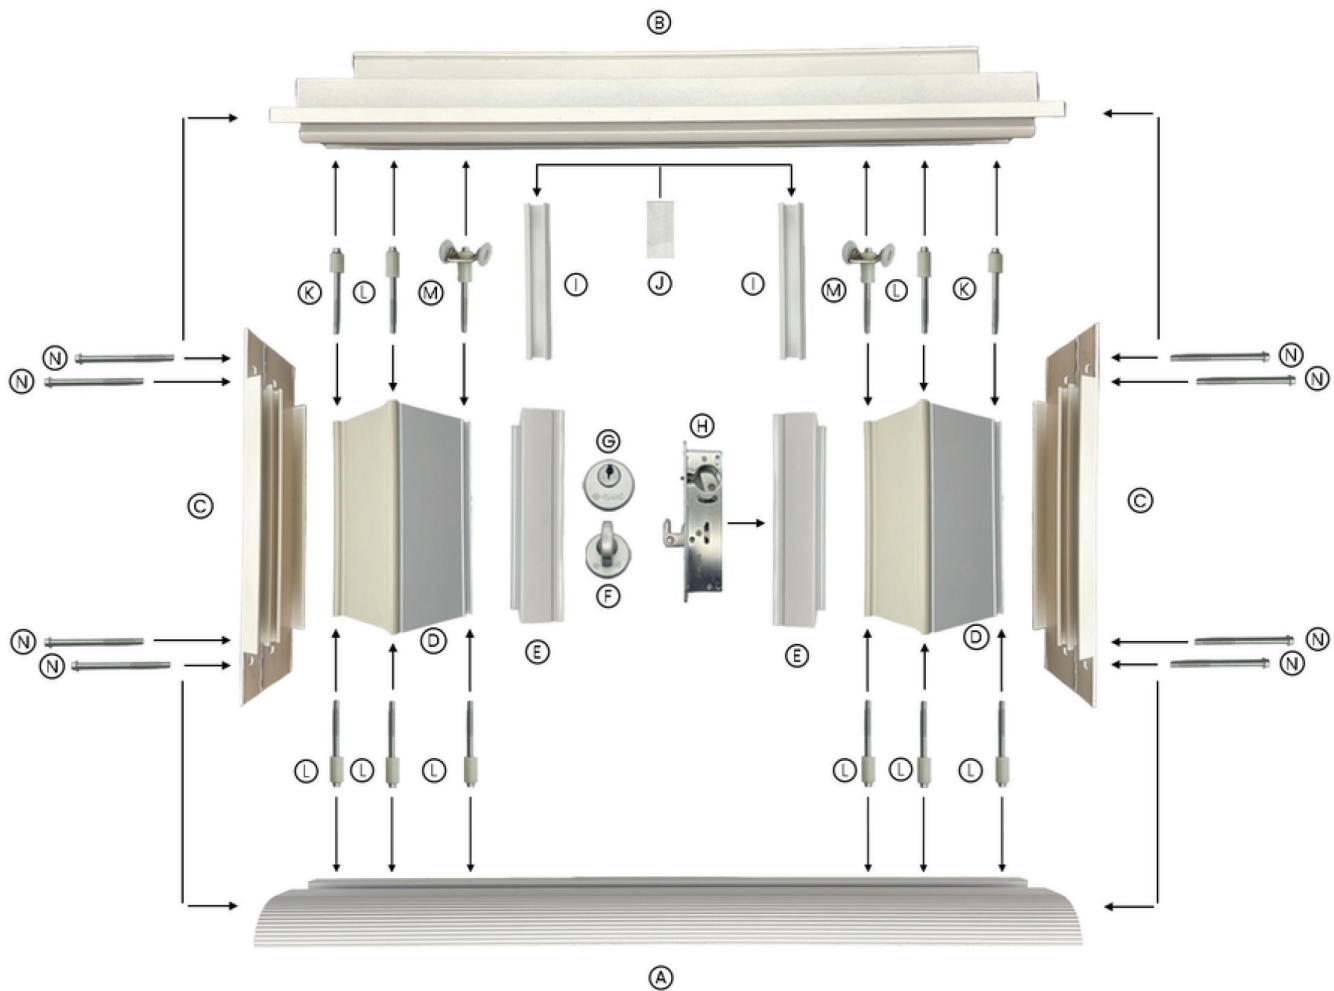
Systems

Code/Reference	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
ACCHAND 	Accordion Handle for mortise centermate assembly Available in bright white, light beige, dark bronze, and cream	●	●	●		1
WHEEASSEMBLY 	Wheel assembly	●	●	●	●	1
BUSHASSBLYLG 	Large bushing assembly	●	●	●	●	1
BUSHASSBLYSM 	Small bushing assembly	●	●	●	●	1
SS14X3 	#14 x 3" stainless steel screw	●	●	●	●	1

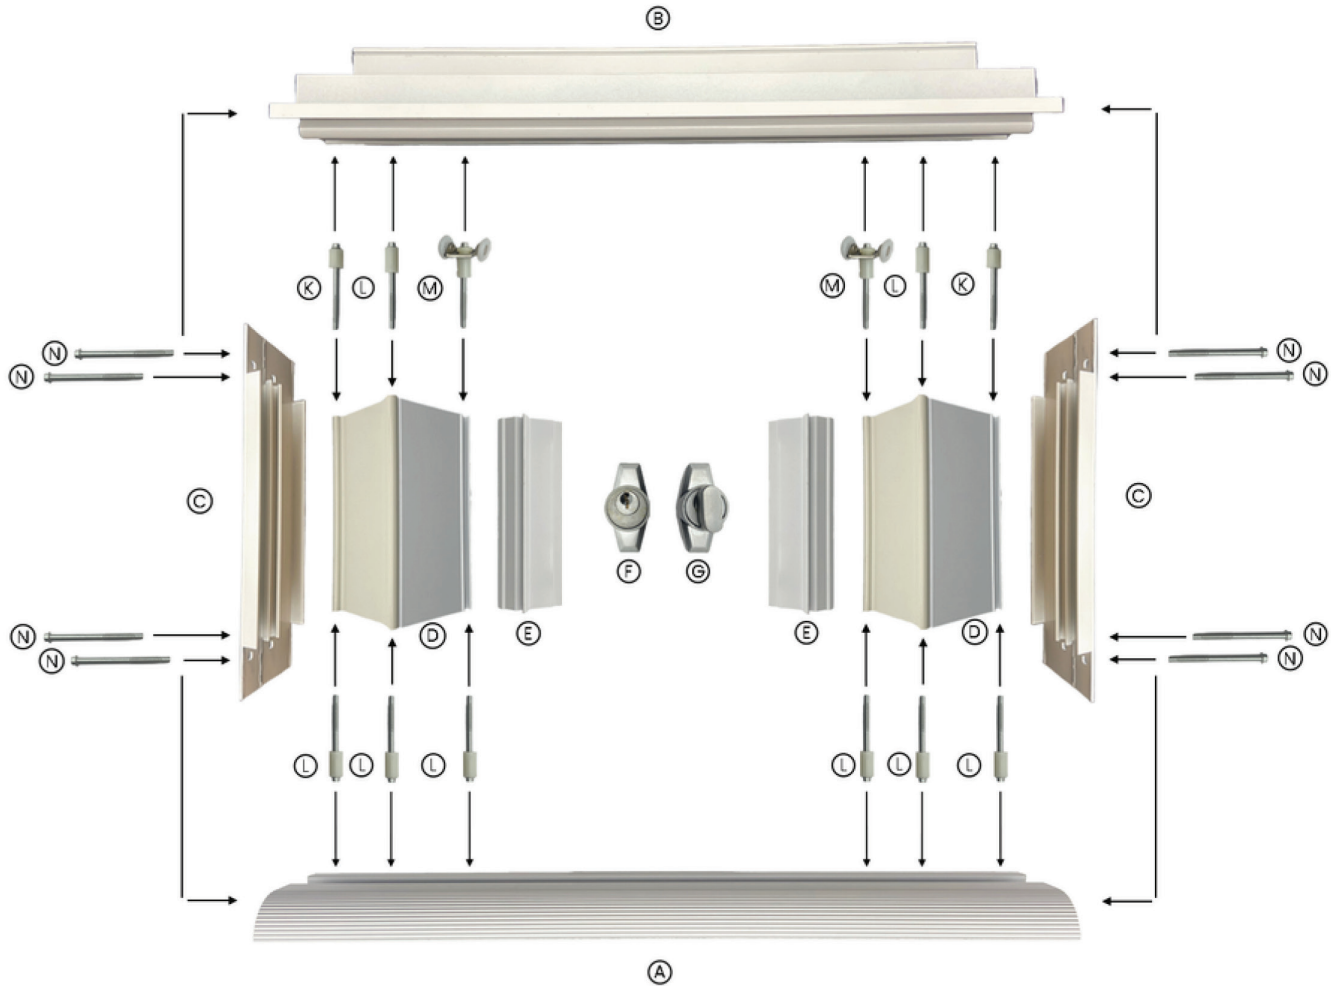
Systems

Code/Reference	Description	Direct	Non-Direct	Mortise	Flat Blade	Pkg.
RIV 	Pop rivet for mortise centermate assembly	●	●	●		1

1. Accordion Shutter Breakdowns



Letter	Description	Quantity	Page #	Comments
A	Bottom Track	1	8-9	Application will determine type of bottom track needed
B	Top Track	1	5-6	Application will determine type of top track needed
C	Starter Strip	2	14	Application will determine type of starter strip needed
D	Accordion Blade	Opening Width TBD	11	See figure (5.1-5.2) to determine number of blades needed
E	Male & Female Closure	1	11	
F	Thumb Turn	1 or 2	17	Varies depending on lock orientation (in/out or both)
G	Key Lock	1 or 2	17	Varies depending on lock orientation (in/out or both)
H	Hook Bolt	11	18	
I	Centermate Insert	2	11	
J	Flat Bar	4	18	
K	Small Bushing Assembly	Blade Count Will Determine	19	
L	Large Bushing Assembly	Blade Count Will Determine	19	
M	Wheel Assembly	Blade Count Will Determine	19	
N	#14 x 3" Screw	Blade Count Will Determine	19	



Letter	Description	Quantity	Page #	Comments
A	Bottom Track	1	8-9	Application will determine type of bottom track needed
B	Top Track	1	5-6	Application will determine type of top track needed
C	Starter Strip	2	14	Application will determine type of starter strip needed
D	Accordion Blade	Opening Width TBD	11	See figure (5.1-5.2) to determine number of blades needed
E	Blade Lock	0 or 1	12	
F	Key Lock	0 or 1	17	Varies depending on lock orientation (in/out or both)
G	Thumb Turn	0 or 1	17	Varies depending on lock orientation (in/out or both)
K	Small Bushing Assembly	Blade Count Will Determine	19	
L	Large Bushing Assembly	Blade Count Will Determine	19	
M	Wheel Assembly	Blade Count Will Determine	19	
N	#14 x 3" Screw	Blade Count Will Determine	19	

2. Pre-Cut Measurements & Information

2.1 How to measure your opening?

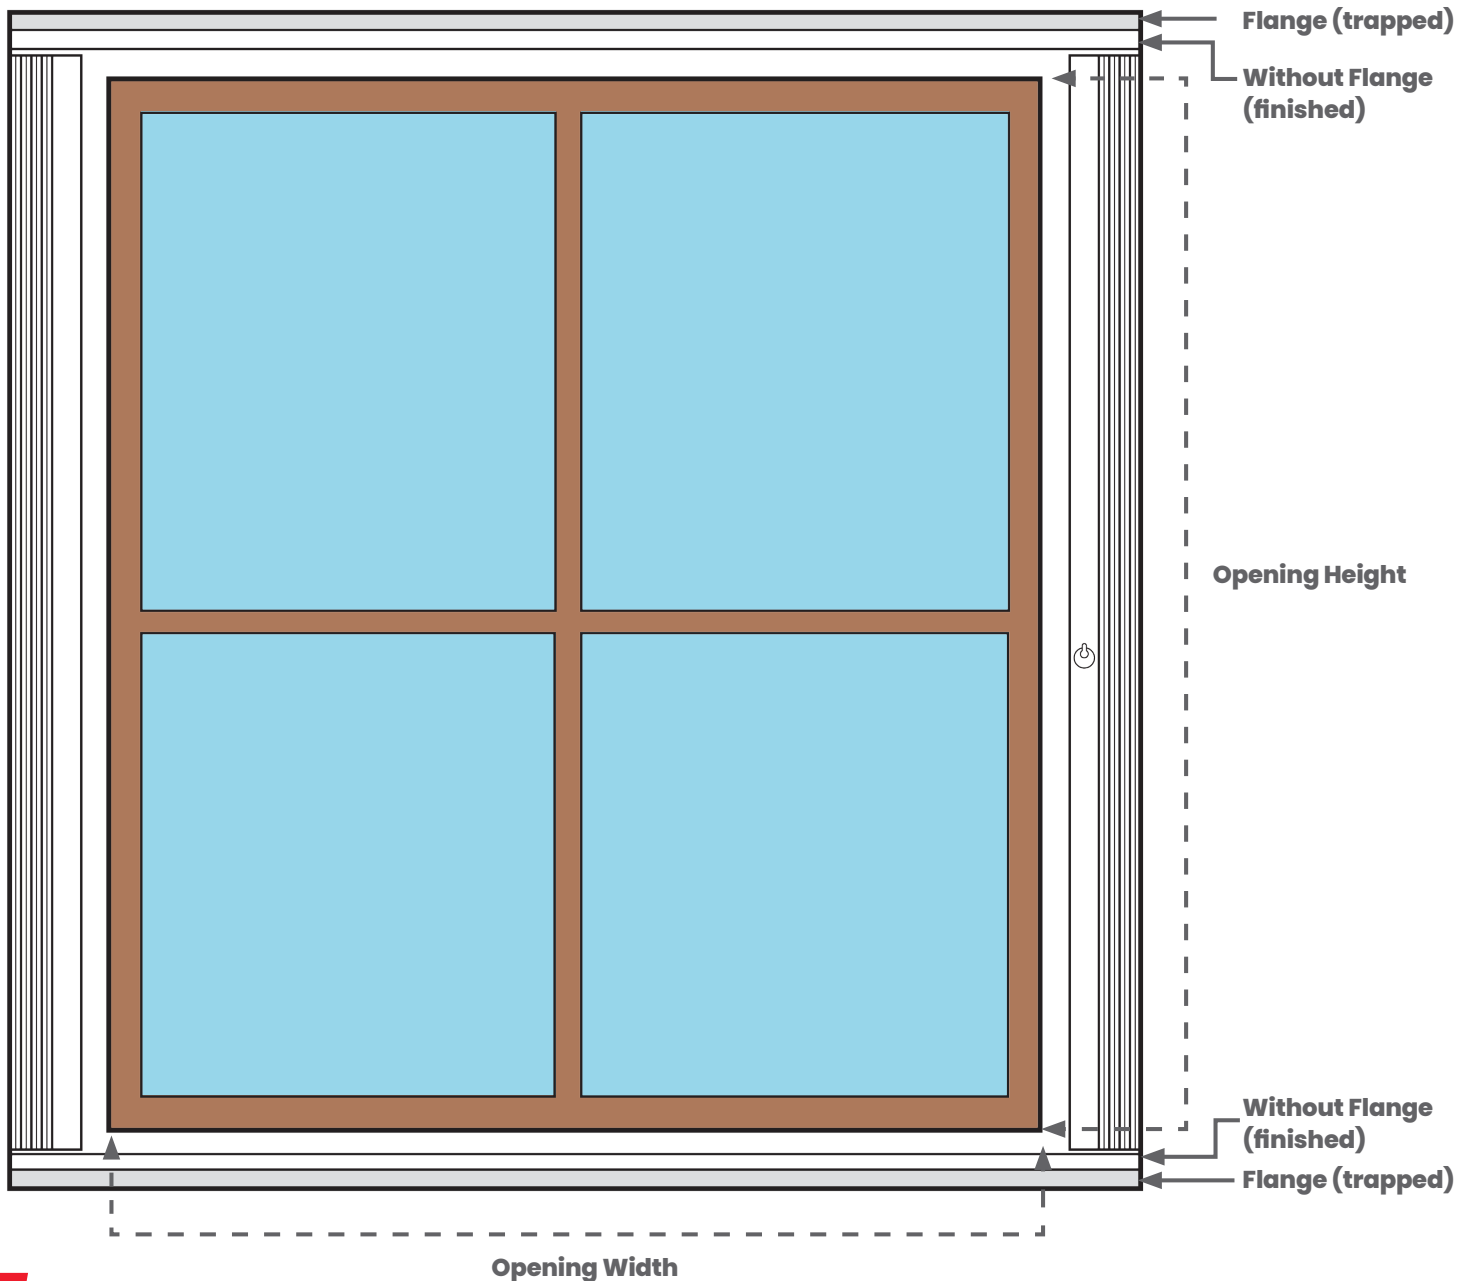
- Measure the width and the height of your opening
- Determine whether the accordion shutter will be mounted on or in the opening
 - if it is going inside of your opening, track width = opening width
 - if it is going inside of the opening, the height = trapped with the flange
 - if mounting on the wall outside of the opening, see the corresponding stacking charts to determine width (figures 5.1-5.2)
- If mounting on wall outside of opening, see figures 3.1-3.4 to determine height

2.2 Croci Terminology

- **opening** is strictly the opening measurement width x height, if accordions are ordered as open, additions will be made to determine final sizes
- **Trapped** is the complete size of the accordion ordered including flanges
- **Finished** is the size from top of track to bottom of track not including flanges

Note: This is the most important information to provide us, any errors made in communicating your measurements (For example, measuring as trapped and ordering as finished) may result in improper finished sizes or incorrect material procurement. If you are not sure, please double check with our customer service.

Fig 2.2 Opening



3. How to Determine Opening Height from Overall Measurement



3.1 How to determine opening height from an overall measurement for trapped including flanges wall mount single leg

(If you are mounting inside of your opening, you already have your measurements)

Fig 3.1

Top Track	Ceiling (With Angle)	SL Flush	1" SL	2" SL
Bottom Track				
Ceiling (With Angle)	Plus 11"	Plus 10.25"	Plus 10.25"	Plus 10.25"
SL Flush	Plus 10.25"	Plus 9.5"	Plus 9.5"	Plus 9.5"
1" SL	Plus 10.25"	Plus 9.5"	Plus 9.5"	Plus 9.5"
2" SL	Plus 10.25"	Plus 9.5"	Plus 9.5"	Plus 9.5"

3.2 How to determine opening height from an overall measurement for wall mount not including flanges single leg

(If you are mounting inside of your opening, you already have your measurements)

Fig 3.2

Top Track	Ceiling (With Angle)	SL Flush	1" SL	2" SL
Bottom Track				
Ceiling (With Angle)	Plus 7"	Plus 7"	Plus 7"	Plus 7"
SL Flush	Plus 7"	Plus 7"	Plus 7"	Plus 7"
1" SL	Plus 7"	Plus 7"	Plus 7"	Plus 7"
2" SL	Plus 7"	Plus 7"	Plus 7"	Plus 7"

3.3

How to determine opening height from an overall measurement
For trapped including flanges wall mount double leg
(If you are mounting inside of your opening, you already have your measurements)

Fig 3.3

Top Track	DL Flush	1" DL	2" DL
Bottom Track			
DL Flush	Plus 10.25"	Plus 10.25"	Plus 10.25"
1" DL	Plus 10.25"	Plus 10.25"	Plus 10.25"
2" DL	Plus 10.25"	Plus 10.25"	Plus 10.25"

3.4

How to determine opening height from an overall measurement
for wall mount not including flanges double leg
(If you are mounting inside of your opening, you already have your measurements)

Fig 3.4

Top Track	DL Flush	1" DL	2" DL
Bottom Track			
DL Flush	Plus 9"	Plus 9"	Plus 9"
1" DL	Plus 9"	Plus 9"	Plus 9"
2" DL	Plus 9"	Plus 9"	Plus 9"

4. How to Determine Blade, Lock, Starter, and Angle Cuts

4.1 How to determine blade and lock cuts for trapped mount including flanges single leg

Fig 4.1

Top Track	Ceiling	SL Flush	1" SL	2" SL
Bottom Track				
Ceiling	Total Height - 3.5"	Total Height - 4.75"	Total Height - 4.75"	Total Height - 4.75"
SL Flush	Total Height - 4.75"	Total Height - 6"	Total Height - 6"	Total Height - 6"
1" SL	Total Height - 4.75"	Total Height - 6"	Total Height - 6"	Total Height - 6"
2" SL	Total Height - 4.75"	Total Height - 6"	Total Height - 6"	Total Height - 6"
Thresh	Total Height - 3.25"	Total Height - 4.5"	Total Height - 4.5"	Total Height - 4.5"
Walk	Total Height - 3.25"	Total Height - 4.5"	Total Height - 4.5"	Total Height - 4.5"
2 piece bottom	Total Height - 3.5"	Total Height - 4.75"	Total Height - 4.75"	Total Height - 4.75"
Recessed (measure from floor)	Total Height - 2.125"	Total Height - 3.375"	Total Height - 3.375"	Total Height - 3.375"

4.2 How to determine blade and lock cuts for wall mount not including flanges single leg

Fig 4.2

Top Track	Ceiling	SL Flush	1" SL	2" SL
Bottom Track				
Ceiling	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
SL Flush	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
1" SL	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
2" SL	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
Thresh	Total Height - 3.25"	Total Height - 3.25"	Total Height - 3.25"	Total Height - 3.25"
Walk	Total Height - 3.25"	Total Height - 3.25"	Total Height - 3.25"	Total Height - 3.25"
2 piece bottom	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
Recessed (measure from floor)	Total Height - 2.125"	Total Height - 2.125"	Total Height - 2.125"	Total Height - 2.125"

4.3 How to determine blade and lock cuts for trapped mount including flanges double leg

Fig 4.3

Top Track	Ceiling	DL Flush	1" DL	2" DL
Bottom Track				
Ceiling	Total Height - 3.5"	Total Height - 4.125"	Total Height - 4.125"	Total Height - 4.125"
DL Flush	Total Height - 4.125"	Total Height - 4.75"	Total Height - 4.75"	Total Height - 4.75"
1" DL	Total Height - 4.125"	Total Height - 4.75"	Total Height - 4.75"	Total Height - 4.75"
2" DL	Total Height - 4.125"	Total Height - 4.75"	Total Height - 4.75"	Total Height - 4.75"
Thresh	Total Height - 3.25"	Total Height - 3.875"	Total Height - 3.875"	Total Height - 3.875"
Walk	Total Height - 3.25"	Total Height - 3.875"	Total Height - 3.875"	Total Height - 3.875"
2 piece bottom	Total Height - 3.5"	Total Height - 4.125"	Total Height - 4.125"	Total Height - 4.125"
Recessed (measure from floor)	Total Height - 2.125"	Total Height - 2.75"	Total Height - 2.75"	Total Height - 2.75"

4.4 How to determine blade and lock cuts for wall mount not including flanges double leg

Fig 4.4

Top Track	Ceiling	DL Flush	1" DL	2" DL
Bottom Track				
Ceiling	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
DL Flush	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
1" DL	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
2" DL	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
Thresh	Total Height - 3.25"	Total Height - 3.25"	Total Height - 3.25"	Total Height - 3.25"
Walk	Total Height - 3.25"	Total Height - 3.25"	Total Height - 3.25"	Total Height - 3.25"
2 piece bottom	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"	Total Height - 3.5"
Recessed (measure from floor)	Total Height - 2.125"	Total Height - 2.125"	Total Height - 2.125"	Total Height - 2.125"

4.5 How to determine starter strip cuts

- Non-Direct
 - starter strip = blade cut
- Direct Mount
 - if using wall track top and bottom; starter cut = blade cut + 3.5"
 - if using wall track and walkover or thresh; starter cut = blade cut + 3.25"

4.6 How to determine angle cut

- When not using a direct mount system and choosing to use angle for sides, all angle cuts should be blade cuts + 3.5", unless using walkover or thresh track it will be blade cut + 3.25"

4.7 To determine overall width and amount of blades needed refer to figures 5.1–5.2

5. How to Determine Overall Width and Number of Blades Needed



5.1 Stacking Chart for Push Lock Flat Mate System Part 1

Fig. 5.1

Total pc count	Left Blades	Right Blades	Center Mates	Inches of Blades	Stacking Blades	Total Stacking	Track Length	Window Opening
3	1	2	3.25"	9.75"	0.75"	4.25"	13"	8.75"
5	2	3	3.25"	16.25"	1.25"	4.75"	19.5"	14.75"
7	3	4	3.25"	22.75"	1.625"	5.125"	26"	20.875"
9	4	5	3.25"	29.25"	2.125"	5.625"	32.5"	26.875"
11	5	6	3.25"	35.75"	2.625"	6.125"	39"	32.875"
13	6	7	3.25"	42.25"	3.125"	6.625"	45"	38.875"
15	7	8	3.25"	48.75"	3.5"	7"	51.5"	45"
17	8	9	3.25"	55.25"	4"	7.5"	58"	51"
19	9	10	3.25"	61.75"	4.5"	8"	64.5"	57"
21	10	11	3.25"	68.25"	5"	8.5"	71"	63"
23	11	12	3.25"	74.75"	5.375"	8.875"	77.5"	69.125"
25	12	13	3.25"	81.25"	5.875"	9.375"	84"	75.125"
27	13	14	3.25"	87.75"	6.375"	9.875"	90.5"	81.125"
29	14	15	3.25"	94.25"	6.875"	10.375"	97"	87.125"
31	15	16	3.25"	100.75"	7.25"	10.75"	103.5"	93.25"
33	16	17	3.25"	107.25"	7.75"	11.25"	110"	99.25"
35	17	18	3.25"	113.75"	8.25"	11.75"	116.5"	105.25"
37	18	19	3.25"	120.25"	8.75"	12.25"	123"	111.25"
39	19	20	3.25"	126.75"	9.125"	12.625"	129.5"	117.375"
41	20	21	3.25"	133.25"	9.625"	13.125"	136"	123.375"
43	21	22	3.25"	139.75"	10.125"	13.625"	142.5"	129.375"
45	22	23	3.25"	146.25"	10.625"	14.125"	149"	135.375"
47	23	24	3.25"	152.75"	11"	14.5"	155.5"	141.5"
49	24	25	3.25"	159.25"	11.5"	15"	162"	147.5"
51	25	26	3.25"	165.75"	12"	15.5"	168.5"	153.5"
53	26	27	3.25"	172.25"	12.5"	16"	175"	159.5"
55	27	28	3.25"	178.75"	12.875"	16.375"	181.5"	165.625"
57	28	29	3.25"	185.25"	13.375"	16.875"	188"	171.625"
59	29	30	3.25"	191.75"	13.875"	17.375"	194.5"	177.625"
61	30	31	3.25"	198.25"	14.375"	17.875"	201"	183.625"
63	31	32	3.25"	204.75"	14.75"	18.25"	207.5"	189.75"

5.1 Stacking Chart for Push Lock Flat Mate System Part 2

Fig. 5.1 continued

Total pc count	Left Blades	Right Blades	Center Mates	Inches of Blades	Stacking Blades	Total Stacking	Track Length	Window Opening
65	32	33	3.25"	211.25"	15.25"	18.75"	214"	195.75"
67	33	34	3.25"	217.75"	15.75"	19.25"	220.5"	201.75"
69	34	35	3.25"	224.25"	16.25"	19.75"	227"	207.75"
71	35	36	3.25"	230.75"	16.625"	20.125"	233.5"	213.875"
73	36	37	3.25"	237.25"	17.125"	20.625"	240"	219.875"
75	37	38	3.25"	243.75"	17.625"	21.125"	246.5"	225.875"
77	38	39	3.25"	250.25"	18.125"	21.625"	253"	231.875"
79	39	40	3.25"	256.75"	18.5"	22"	259.5"	238"
81	40	41	3.25"	263.25"	19"	22.5"	266"	244"
83	41	42	3.25"	269.75"	19.5"	23"	272.5"	250"
85	42	43	3.25"	276.25"	20"	23.5"	279"	256"
87	43	44	3.25"	282.75"	20.375"	23.875"	285.5"	262.125"
89	44	45	3.25"	289.25"	20.875"	24.375"	292"	268.125"
91	45	46	3.25"	295.75"	21.375"	24.875"	298.5"	274.125"
93	46	47	3.25"	302.25"	21.875"	25.375"	305"	280.125"
95	47	48	3.25"	308.75"	22.25"	25.75"	311.5"	286.25"
97	48	49	3.25"	315.25"	22.75"	26.25"	318"	292.25"
99	49	50	3.25"	321.75"	23.25"	26.75"	324.5"	298.25"
101	50	51	3.25"	328.25"	23.75"	27.25"	331"	304.25"
103	51	52	3.25"	334.75"	24.125"	27.625"	337.5"	310.375"
105	52	53	3.25"	341.25"	24.625"	28.125"	344"	316.375"
107	53	54	3.25"	347.75"	25.125"	28.625"	350.5"	322.375"
109	54	55	3.25"	354.25"	25.625"	29.125"	357"	328.375"
111	55	56	3.25"	360.75"	26"	29.5"	363.5"	334.5"
113	56	57	3.25"	367.25"	26.5"	30"	370"	340.5"
115	57	58	3.25"	373.75"	27"	30.5"	376.5"	346.5"
117	58	59	3.25"	380.25"	27.5"	31"	383"	352.5"
119	59	60	3.25"	386.75"	27.875"	31.375"	389.5"	358.625"
121	60	61	3.25"	393.25"	28.375"	31.875"	396"	364.625"
123	61	62	3.25"	399.75"	28.875"	32.375"	402.5"	370.625"
125	62	63	3.25"	406.25"	29.375"	32.875"	409"	376.625"

5.1 Stacking Chart for Push Lock Flat Mate System Part 3

Fig. 5.1 continued

Total pc count	Left Blades	Right Blades	Center Mates	Inches of Blades	Stacking Blades	Total Stacking	Track Length	Window Opening
127	63	64	3.25"	412.75"	29.75"	33.25"	415.5"	382.75"
129	64	65	3.25"	419.25"	30.25"	33.75"	422"	388.75"
131	65	66	3.25"	425.75"	30.75"	34.25"	428.5"	394.75"
133	66	67	3.25"	432.25"	31.25"	34.75"	435"	400.75"
135	67	68	3.25"	438.75"	31.625"	35.125"	441.5"	406.875"
137	68	69	3.25"	445.25"	32.125"	35.625"	448"	412.875"
139	69	70	3.25"	451.75"	32.625"	36.125"	454.5"	418.875"
141	70	71	3.25"	458.25"	33.125"	36.625"	461"	424.875"
143	71	72	3.25"	464.75"	33.5"	37"	467.5"	431"
145	72	73	3.25"	471.25"	34"	37.5"	474"	437"
147	73	74	3.25"	477.75"	34.5"	38"	480.5"	443"
149	74	75	3.25"	484.25"	35"	38.5"	487"	449"
151	75	76	3.25"	490.75"	35.375"	38.875"	493.5"	455.125"
153	76	77	3.25"	497.25"	35.875"	39.375"	500"	461.125"
155	77	78	3.25"	503.75"	36.375"	39.875"	506.5"	467.125"
157	78	79	3.25"	510.25"	36.875"	40.375"	513"	473.125"
159	79	80	3.25"	516.75"	37.25"	40.75"	519.5"	479.25"
161	80	81	3.25"	523.25"	37.75"	41.25"	526"	485.25"
163	81	82	3.25"	529.75"	38.25"	41.75"	532.5"	491.25"
165	82	83	3.25"	536.25"	38.75"	42.25"	539"	497.25"
167	83	84	3.25"	542.75"	39.125"	42.625"	545.5"	503.375"
169	84	85	3.25"	549.25"	39.625"	43.125"	552"	509.375"
171	85	86	3.25"	555.75"	40.125"	43.625"	558.5"	515.375"
173	86	87	3.25"	562.25"	40.625"	44.125"	565"	521.375"
175	87	88	3.25"	568.75"	41"	44.5"	571.5"	527.5"
177	88	89	3.25"	575.25"	41.5"	45"	578"	533.5"
179	89	90	3.25"	581.75"	42"	45.5"	584.5"	539.5"
181	90	91	3.25"	588.25"	42.5"	46"	591"	545.5"
183	91	92	3.25"	594.75"	42.875"	46.375"	597.5"	551.625"
185	92	93	3.25"	601.25"	43.375"	46.875"	604"	557.625"
187	93	94	3.25"	607.75"	43.875"	47.375"	610.5"	563.625"
189	94	95	3.25"	614.25"	44.375"	47.875"	617"	569.625"

5.2 Stacking Chart for Mortise Locking System Part I

Fig. 5.2

Number of Blades	Inches of Blades	Stacking Blades	Total Blades	Track Length	Window Opening
4	13"	1"	5.5"	17.25"	11.75"
6	19.5"	1.5"	6"	23.75"	17.75"
8	26"	1.875"	6.375"	30.25"	23.875"
10	32.5"	2.375"	6.875"	36.75"	29.875"
12	39"	2.587"	7.375"	43.25"	35.875"
14	45.5"	3.375"	7.875"	49.75"	41.875"
16	52"	3.75"	8.25"	56.25"	48"
18	58.5"	4.25"	8.75"	62.75"	54"
20	65"	4.75"	9.25"	69.25"	60"
22	71.5"	5.125"	9.625"	75.75"	66.125"
24	78"	5.625"	10.125"	82.25"	72.125"
26	84.5"	6.125"	10.625"	88.75"	78.125"
28	91"	6.625"	11.125"	95.25"	84.125"
30	97.5"	7"	11.5"	101.75"	90.25"
32	104"	7.5"	12"	108.25"	96.25"
34	110.5"	8"	12.5"	114.75"	102.25"
36	117"	8.375"	12.875"	121.25"	108.375"
38	123.5"	8.875"	13.375"	127.75"	114.375"
40	130"	9.375"	13.875"	134.25"	120.375"
42	136.5"	9.875"	14.375"	140.75"	126.375"
44	143"	10.25"	14.75"	147.25"	132.5"
46	149.5"	10.75"	15.25"	153.75"	138.5"
48	156"	11.25"	15.75"	160.25"	144.5"
50	162.5"	11.625"	16.125"	166.75"	150.625"
52	169"	12.125"	16.625"	173.25"	156.625"
54	175.5"	12.625"	17.125"	179.75"	162.625"
56	182"	13.125"	17.625"	186.25"	168.625"
58	188.5"	13.5"	18"	192.75"	174.75"
60	195"	14"	18.5"	199.25"	180.75"
62	201.5"	14.5"	19"	205.75"	186.75"
64	208"	15"	19.5"	212.25"	192.75"
66	214.5"	15.375"	19.875"	218.75"	198.875"

5.2 Stacking Chart for Mortise Locking System Part 2

Fig. 5.2 Continued

Number of Blades	Inches of Blades	Stacking Blades	Total Blades	Track Length	Window Opening
68	221"	15.875"	20.375"	225.25"	204.875"
70	227.5"	16.375"	20.875"	231.75"	210.875"
72	234"	16.75"	21.25"	238.25"	217"
74	240.5"	17.25"	21.75"	244.75"	223"
76	247"	17.75"	22.25"	251.25"	229"
78	253.5"	18.25"	22.75"	257.75"	235"
80	260"	18.625"	23.125"	264.25"	241.25"
82	266.5"	19.125"	23.625"	270.75"	247.125"
84	273"	19.625"	24.125"	277.25"	253.125"
86	279.5"	20"	24.5"	283.75"	259.25"
88	286"	20.5"	25"	290.25"	265.25"
90	292.5"	21"	25.5"	296.75"	271.25"
92	299"	21.5"	26"	303.25"	277.25"
94	305.5"	21.875"	26.375"	309.75"	283.375"
96	312"	22.375"	26.875"	316.25"	289.375"
98	318.5"	22.875"	27.375"	322.75"	295.375"
100	325"	23.25"	27.75"	329.25"	301.5"
102	331.5"	23.75"	28.25"	335.75"	307.5"
104	338"	24.25"	28.75"	342.25"	313.5"
106	344.5"	24.75"	29.25"	348.75"	319.5"
108	351"	25.125"	29.625"	355.25"	325.625"
110	357.5"	25.625"	30.125"	361.75"	331.625"
112	364"	26.125"	30.625"	368.25"	337.625"
114	370.5"	26.625"	31.125"	374.75"	343.625"
116	377"	27"	31.5"	381.25"	349.75"
118	383.5"	27.5"	32"	387.75"	355.75"
120	390"	28"	32.5"	394.25"	361.75"
122	396.5"	28.375"	32.875"	400.75"	367.875"
124	403"	28.875"	33.375"	407.25"	373.875"
126	409.5"	29.375"	33.875"	413.75"	379.875"
128	416"	29.875"	34.375"	420.25"	385.875"
130	422.5"	30.25"	34.75"	426.75"	392"

5.2 Stacking Chart for Mortise Locking System Part 3

Fig. 5.2 Continued

Number of Blades	Inches of Blades	Stacking Blades	Total Blades	Track Length	Window Opening
132	429"	30.75"	35.25"	433.25"	398"
134	435.5"	31.25"	35.75"	439.75"	404"
136	442"	31.625"	36.125"	446.25"	410.125"
138	448.5"	32.125"	36.625"	452.75"	416.125"
140	455"	32.625"	37.125"	459.25"	422.125"
142	461.5"	33.125"	37.625"	465.75"	428.125"
144	468"	33.5"	38"	472.25"	434.25"
146	474.5"	34"	38.5"	478.75"	440.25"
148	481"	34.5"	39"	485.25"	446.25"
150	487.5"	34.875"	39.375"	491.75"	452.375"
152	494"	35.375"	39.875"	498.25"	458.375"
154	500.5"	35.875"	40.375"	504.75"	464.375"
156	507"	36.375"	40.875"	511.25"	470.375"
158	513.5"	36.75"	41.25"	517.75"	476.5"
160	520"	37.25"	41.75"	524.25"	482.5"
162	526.5"	37.75"	42.25"	530.75"	488.5"
164	533"	38.25"	42.75"	537.25"	494.5"
166	539.5"	38.625"	43.125"	543.75"	500.625"
168	546"	39.125"	43.625"	550.25"	606.625"
170	552.5"	39.625"	44.125"	556.75"	512.625"
172	559"	40"	44.5"	563.25"	518.75"
174	565.5"	40.5"	45"	569.75"	524.75"
176	572"	41"	45.5"	576.25"	530.75"
178	578.5"	41.5"	46"	582.75"	536.75"
180	585"	41.875"	46.375"	589.25"	542.875"
182	591.5"	42.375"	46.875"	595.75"	548.875"
184	598"	42.875"	47.375"	602.25"	554.875"
186	604.5"	43.25"	47.75"	608.75"	561"
188	611"	43.75"	48.25"	615.25"	567"
190	617.5"	44.25"	48.75"	621.75"	573"

6. How to Change Accordion Key Locks & Thumb Turns



6.1 How to change Accordion Key Locks & Thumb Turns

- On the faceplate, take out the 3 Phillips head screws and remove the faceplate. There are 2 very small flathead screws that are tightened so the locks don't turn.
- Loosen the one that is on the side of the lock that you are replacing.
- After loosening the screw you can remove the thumb turn or key lock by unscrewing it from the threads (counterclockwise).
- It may be difficult to get it started if it is tight, so squeezing the closure to relieve the tightness may be helpful.
- if necessary you can use large pliers to squeeze the closure, but you may damage the outer coating of the key lock or thumb turn.
- After removing, notice the small number of threads in the hook bolt that the key lock or thumb turn has to thread.
- Be careful not to cross thread or you will have to replace the hook bolt as well.
- Also notice the small groove on the threaded part of the thumb turn or key lock. That is where the small screw fits in to prevent the key lock or thumb turn from loosening.
- Put in the new key lock or thumb turn by screwing it in clockwise, again making sure it threads properly and does not cross thread.
- Once you are sure it is threading properly, spin it on as tight as you can
- again, if needed it may help to squeeze the closure.
- Now you can screw in the tiny screw on the top of the hook bolt to secure the thumb turn or key lock.
- Make sure the head of the screw is recessed or at least flush with the top surface of the hook bolt.
- If it is not, you will need to loosen it back up a little and slightly turn the key lock or thumb turn a little one way or the other until the tiny screw fits into the groove.
- Tighten the tiny screw and put the faceplate back on with the 3 Phillips head screws.

Thumb Turn



Key Lock



Faceplate



Hook Bolt

